HOME DECORATORS COLLECTION

326 314/89208Y/25MM4495-PC72
XXX XXX/89215/25MM4495-PB83
XXX XXX/89222/25MM4495-PM84

USE AND CARE GUIDE

GRAND HAVEN ELECTRIC FIREPLACE

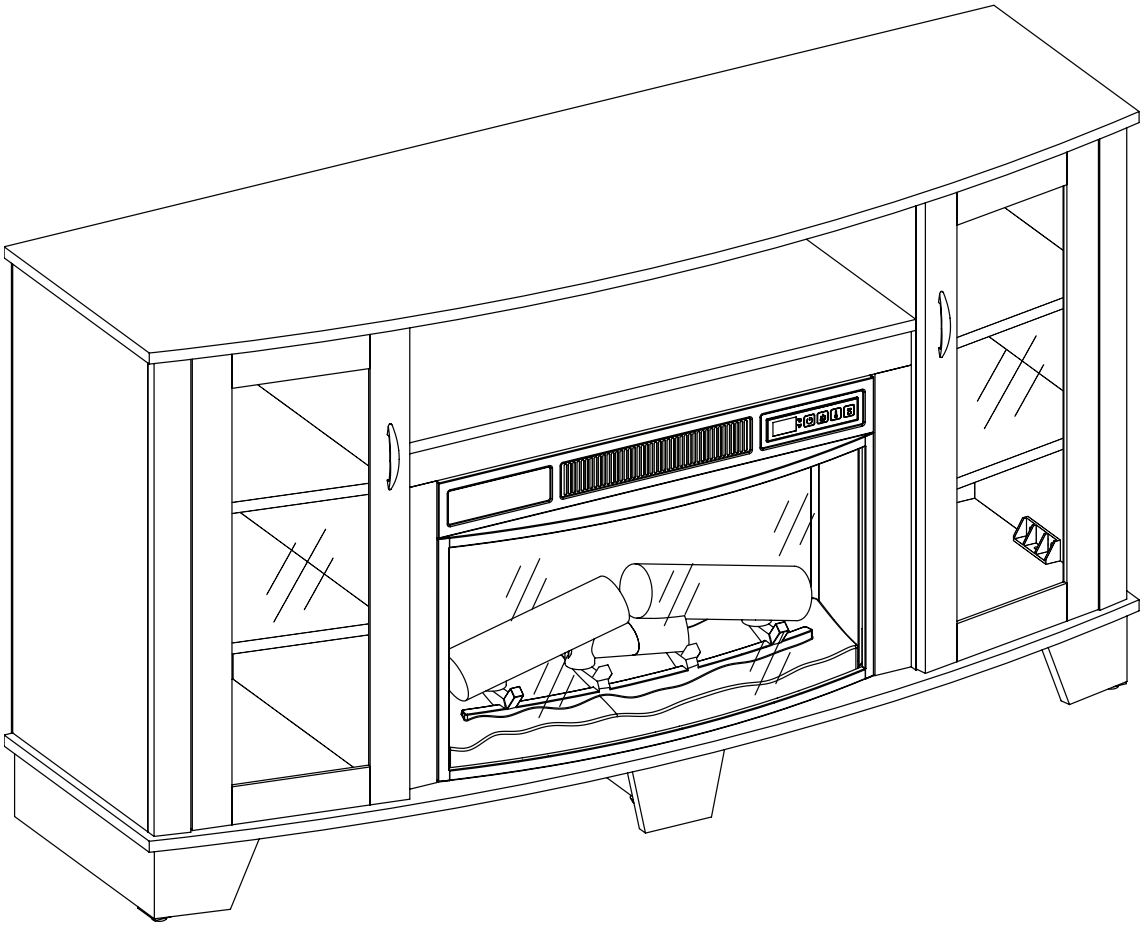

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators through the purchase of this electric fireplace. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home imporvement needs. Thank you for choosing Home Decorator!

Table of Contents

Maximum Load Warning **2**
Safety Information **3**
Warranty **5**
Pre-Assembly **6**
Hardware Included **6**
Product Specifications **6**
Tools Required **6**
Package Contents **7**
Assembly **8**
Operation **15**
FCC/IC Information **17**
Care & Cleaning **17**
Troubleshooting **18**
Replacement Parts **20**

Maximum Load Warning

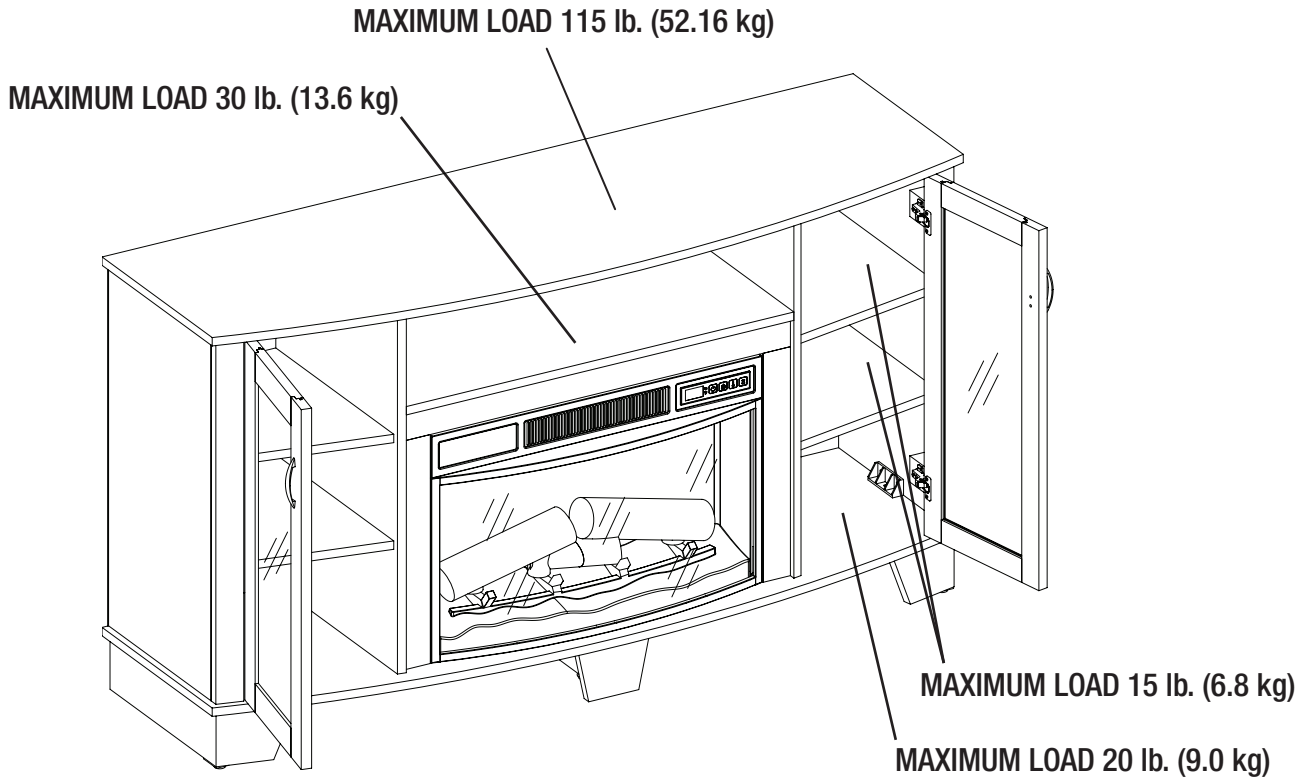

CAUTION: This unit is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury.

NOTE: Flat Panel TVs with base support should be placed squarely in the center of the stand with no overhang on any side.

Safety Information

Please read and understand this entire manual before attempting to assemble, operate or install the product. If you have any question regarding the product, please call customer service at 1-800-986-3460, 8 a.m.-7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons including the following:

1. Read all instructions before using this appliance.
2. If possible, always unplug this appliance when not in use.
3. Only a qualified service person should repair this product.
4. Do not use outdoors.
5. Do not cover the cord under the carpeting. Do not cover with throw rugs, runners or the like. Arrange the cord away from traffic areas and where it will not be tripped over.
6. To disconnect this appliance, turn the controls to the off position, and then remove the plug from the outlet.
7. Connect to properly grounded outlets only.
8. This appliance, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the current CSA C22.1 Canadia Electrical Code. For U.S.A. installations, follow local codes and the National Electrical Code, ANSI/NFPA NO.70.
9. This appliance has hot and arcing or sparking parts inside Do not use it in areas where gasoline, paint or flammable liquids are used or stored. This fireplace should not be used as a drying rack for clothing. Do not hang Christmas stockings or other decorations on or near this product.
10. There is a thermostat limiter inside the heater. When inner temperature overheating or abnormal heating occurs, the thermostat protective device will cut off the power supply to avoid damage to the fireplace or risk of fire.

DANGER: High temperatures may be generated under certain abnormal conditions. Do not partially or fully cover or obstruct the front of this heater.

WARNING: In order to avoid overheating, do not cover the heater.

WARNING: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: Under no circumstances should this fireplace be modified. Parts that must be removed for servicing must be replaced prior to operating this fireplace again.

WARNING: This appliance is hot when in use. To avoid burns, do not touch hot surfaces with bare skin. If provided, use handles when moving this appliance. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 ft. (0.9 m) from the front of this appliance.

WARNING: This heater may include a visual alarm to warn that parts of the heater are getting excessively hot. If the alarm flashes immediately turn the heater off and inspect for any objects on or adjacent to the heater that may cause high temperatures.
DO NOT OPERATE THE HEATER WITH THE ALARM FLASHING!

WARNING: This appliance is not a toy. Supervise children playing near it.

WARNING: Use extreme caution when operating heater near children and the disabled.

WARNING: This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate this appliance where it may fall into a bathtub or other water container.

WARNING: Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the appliance.

WARNING: To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where the opening may become blocked.

WARNING: Use this appliance only as described in the manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.

WARNING: This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored. This fireplace should not be used as a drying rack for clothing. Do not hang Christmas stockings or other decorations on or near this product.

CAUTION: Never leave the heater operating unattended. Extreme caution is necessary if unsupervised children or invalids are nearby.

CAUTION: Before assembly, carefully use scissors or a utility knife to cut and unwrap all parts. Make sure you do not discard the hardware.

Safety Information

NOTE: Use care in assembling your new fireplace. Take your time and use the hardware provided and a quality Phillips head screwdriver. Never overtighten bolts.

- Do not sit on any part of the mantel.

NOTE: To avoid injury from unexpected starting or electrical shock, do not plug the power cord into a source of power during unpacking and assembly. The cord must remain unplugged whenever you are adjusting/assembling the fireplace.

If any part is missing or damaged, do not attempt to use or plug in the power cord until the missing or damaged part is correctly replaced. To avoid electric shock, use only identical replacement parts when servicing double-insulated tools.

Warranty

1 Year Limited Warranty: The manufacturer warrants that your new Electric Fireplace is free from manufacturing and material defects for a period of one year from date of puchase, subject to the following conditions and limitations.

1. Install and operate this appliance in accordance with the installation and operating instructions furnished with the product at all times. Any unauthorized repair, alteration, willful abuse, accident, or misuse of the product shall nullify this warranty.

2. This warranty is non-transferable, and is made to the original owner, provided that the purchase was made through an authorized supplier of the product.

3. The warranty is limited to the repair or replacement of part(s) found to be defective in material or workmanship, provided that such part(s) have been subjected to normal conditions of use and service, after said defect is confirmed by the manufacturer's inspection.

4. The manufacturer may, at its discretion, fully discharge all obligations with respect to this warranty by refunding the wholesale price of the defective part(s).

5. Any installation, labor, construction, transportation, or other related costs/expenses arising from defective part(s), repair, replacement, or otherwise of same, will not be covered by this warranty, nor shall the manufacturer assume responsibility for same.

6. The owner/user assumes all other risks, if any, including the risk of any direct, indirect or consequential loss or damage arising out of the use, or inability to use the product,except as provided by law.

7. All other warranties – expressed or implied –with respect to the product, its components and accessories, or any obligations/liabilities on the part of the manufacturer are hereby expressly excluded.

8. The manufacturer neither assumes, nor authorizes any third party to assume on its behalf, any other liabilities with respect to the sale of the product.

9. The warranties as outlined within this document do not apply to non accessories used in conjunction with the installation of this product.

10. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

This warranty is void if:

a. The fireplace is subjected to prolonged periods of dampness or condensation.
b. Any unauthorized alteration, willful abuse, accident, or misuse of the product.
c. You do not have the original receipt of purchase.

Pre-Assembly

HARDWARE INCLUDED


AA

BB


CC


DD

EE

FF

GG



HH


II

JJ

KK


LL


MM

NN


OO

ZZ

Part	Description	Part Number	Quantity
AA	Large Bolt	PH-BLTBLK001	14
BB	Washer	PH-WSRBLK001	14
CC	Wood Dowel	PH-DWLNTL001	17
DD	Small Bolt	PH-BLTBLK002	21
EE	Shelf Pin	PH-SPNPCSPLB2	16
FF	Screw with Washer Head	PH-SCRBLK001	34
GG	Knob (with screws, not to scale)	N/A	2
HH	Euro Hinge (not to scale)	N/A	4
II	Large Flathead Screw	N/A	6
JJ	Small Flathead Screw	PH-SCRBLK004	24
KK	Tipping Restraint Hardware	N/A	2
LL	Plastic Connector 2 Hole Block (pre-attached)	PH-PCBBLK001	8
MM	Plastic Connector 3 Hole Block (pre-attached)	PH-PCBBLK002	12
NN	Leveler (pre-attached)	N/A	5
OO	Connection Plate (pre-attached)	PH-PLTBLK002	2
ZZ	Touch-up Pen Model	N/A	1

NOTE: Hardware not shown to actual size.

PRODUCT SPECIFICATIONS

VOLTAGE	120VAC, 60 Hz
AMPS	12.5 Amps
WATTS	1500 Watts

PLANNING ASSEMBLY

Before beginning assembly of product, make sure all parts are present. Compare parts with Hardware Included and Package Contents lists.If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

Estimated Assembly Time: 60 Minutes

TOOLS REQUIRED

Phillips Screwdriver

Pre-Assembly (continued)

PACKAGE CONTENTS

NOTE: All panels are labeled left and right as viewed from the front of unit.

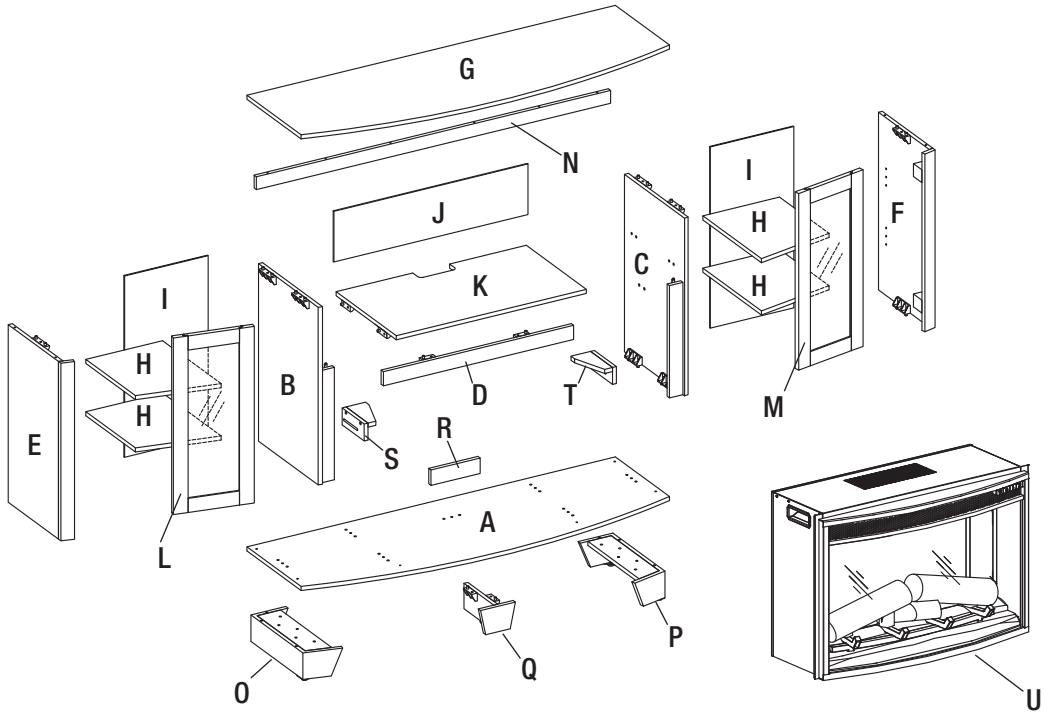

Part	Description	Quantity
A	Base	1
B	Center Left Side Panel	1
C	Center Right Side Panel	1
D	Center Front Panel	1
E	Left Side Panel	1
F	Right Side Panel	1
G	Top	1
H	Adjustable Shelf	4
I	Side Back Panel	2
J	Center Back Panel	1
K	Center Shelf	1
L	Left Door	1
M	Right Door	1
N	Support Rail	1
O	Left Foot	1
P	Right Foot	1
Q	Center Foot	1
R	Center Securing Block	1
S	Left Securing Block	1
T	Right Securing Block	1
U	Insert	1

Assembly

1 Attaching the Front Panel

- ☐ Set the Center Shelf (K) down on a scratch-free surface.
- ☐ Screw the Small Bolts (DD) through the Plastic Connector (LL), attaching the Center Front Panel (D) to the Center Shelf (K).

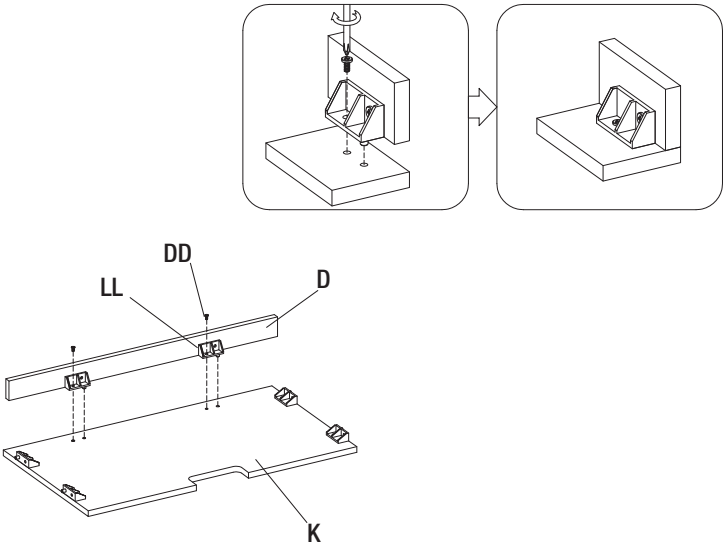

2 Attaching the Side Panels

- ☐ Attach the Center Left Side Panel (B) and Center Right Side Panel (C) to complete assembly.

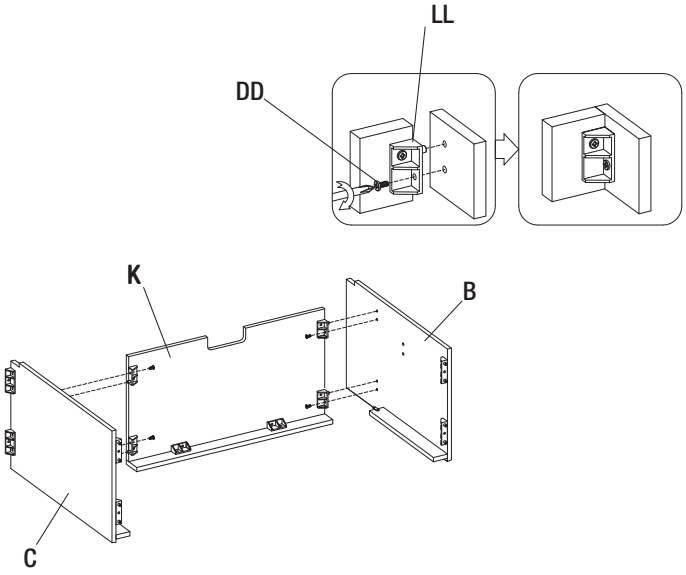

3 Securing the assembly

- ☐ Secure using the Screws (FF) through Connection Plate (OO).

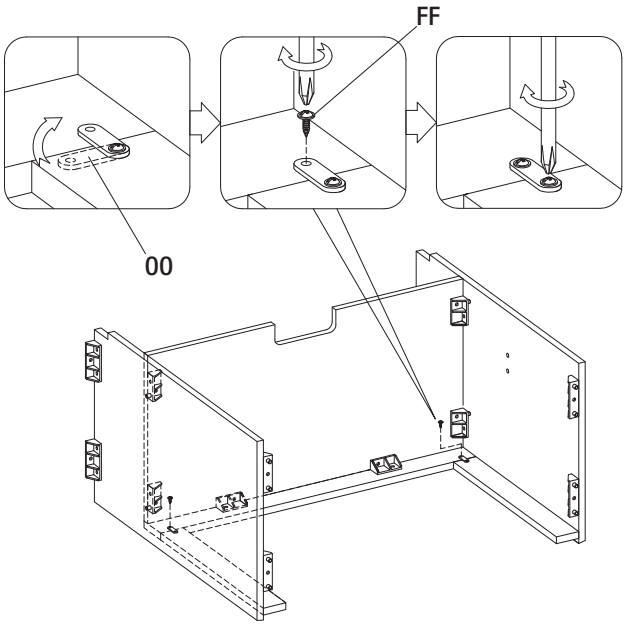

4 Attaching the hinges

- ☐ Attach the Hinge Bracket (H-1) to the Right Side Panel
- ☐ (F). Use a Phillips head screwdriver to tighten the Flat-head Screw (JJ) through the pre-drilled holes.
- ☐ Repeat for the Left Side Panel (E).

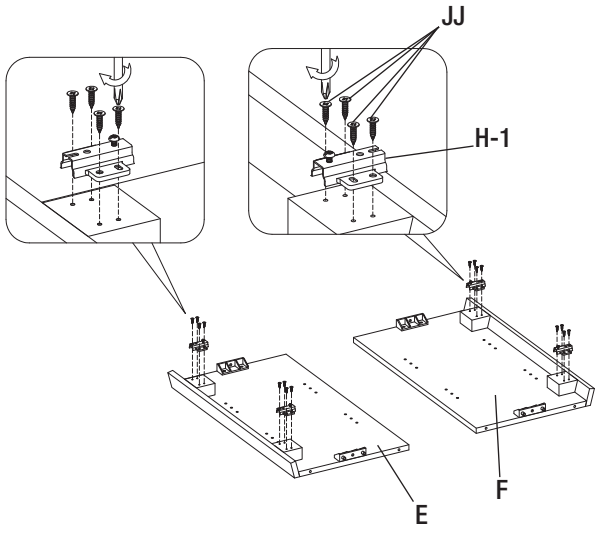

5 Installing the feet

- ☐ Insert Wood Dowels (CC) into the holes on the Base (A).
- ☐ Push the Left Foot (O) and Right Foot (P) snug to the Hearth/Base (A).
- ☐ Insert Large Bolts (AA) through the Washers (BB) and into the pre-drilled holes in the Base (A) and tighten.

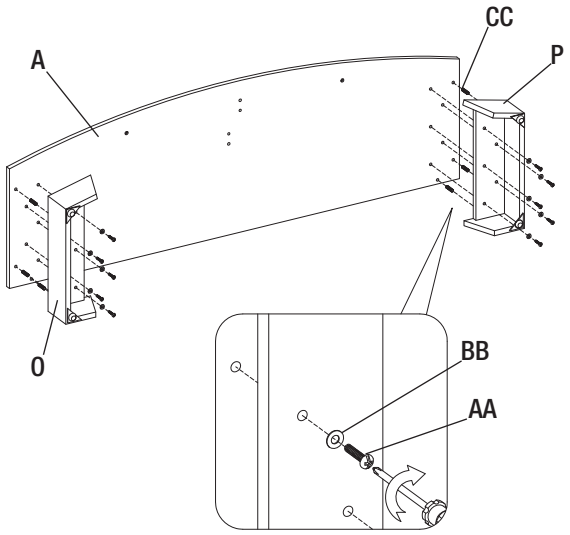

6 Installing the center foot

- ☐ Attach the Center Foot (Q) to the Base (A).
- ☐ Insert Small Bolts (DD) through the Plastic Connector 2 Hole Block (LL) and into the Base (A) and tighten.

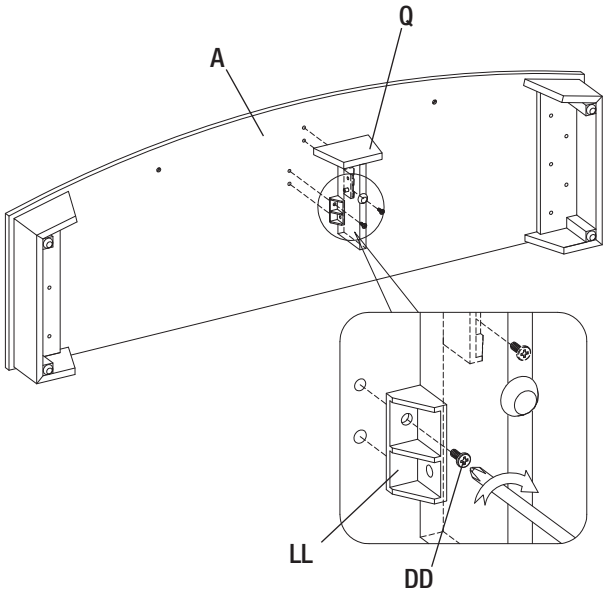

Assembly (continued)

7 Installing the side panels

- □ Attach the completed assembly from step 3 to the Base (A).
- □ Insert Small Bolts (DD) through the holes in the Plastic Connectors (MM) and tighten.
- □ Insert Wood Dowels (CC) into the pre-drilled holes in the base assembly.
- □ Push the Right Side Panel (F) and Left Side Panel (E) snug to the Base (A).
- □ Insert Small Bolts (DD) through the holes in the Plastic Connectors (MM) and tighten.

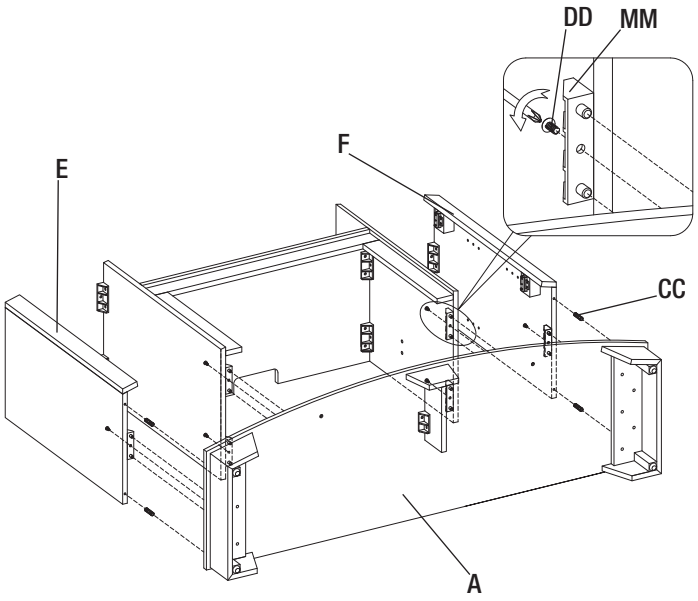

8 Securing the assembly

- □ Insert Large Screws (II) through pre-drilled holes in Base (A) and tighten.

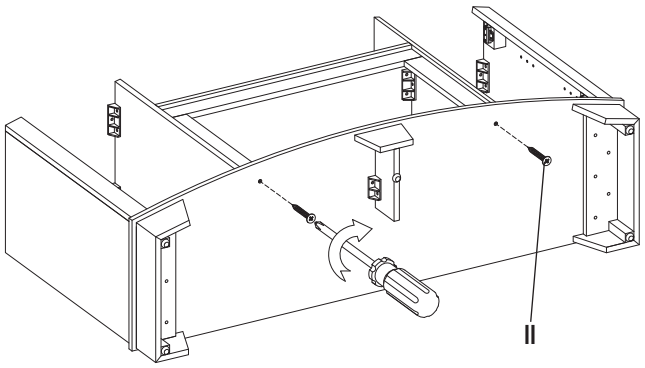

9 Installing the support rail

- □ Insert Wood Dowels (CC) into the holes on the Top (G).
- □ Push the Support Rail (N) to the Top (G).
- □ Insert Large Screws (II) through the pre-drilled holes in the Support Rail (N) and tighten.

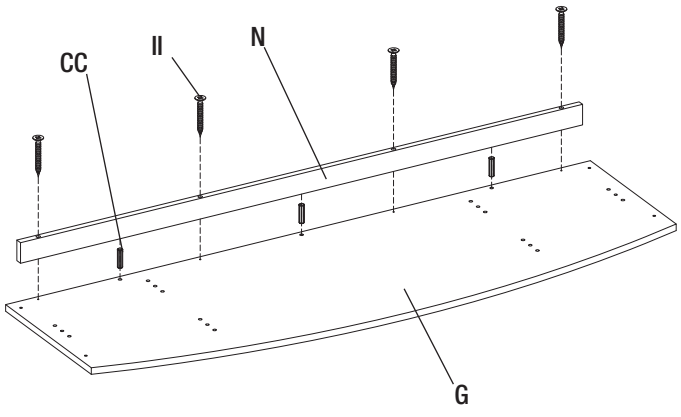

Assembly (continued)

10 Installing the top

- ☐ Place Wood Dowels (CC) into pre-drilled holes located on the Left Side Panel (E) and Right Side Panel (F).
- ☐ Place the Top (G) on top of the completed assembly.
- ☐ From the inside, attach the Top (G) using Small Bolts (DD) through the holes in the Plastic Connector (MM).
- ☐ Use a Phillips head screwdriver to tighten all Small Bolts (DD).

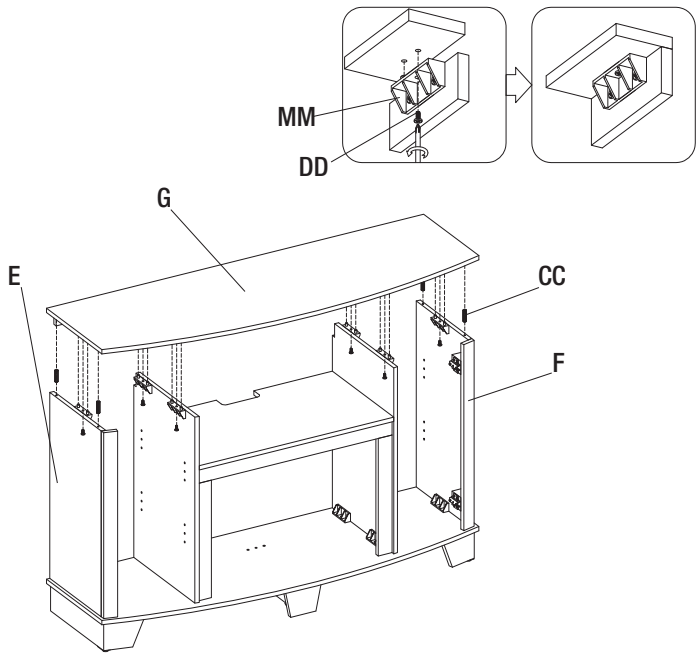

11 Installing the back panels

- ☐ Attach the Side Back Panel (I) and the Center Back Panel (J) to the back of the completed assembly from step 10.
- ☐ Insert Screws (FF) through the pre-drilled holes in the Back Panels to the completed assembly.
- ☐ Use a Phillips Head Screwdriver to tighten the Screws (FF).

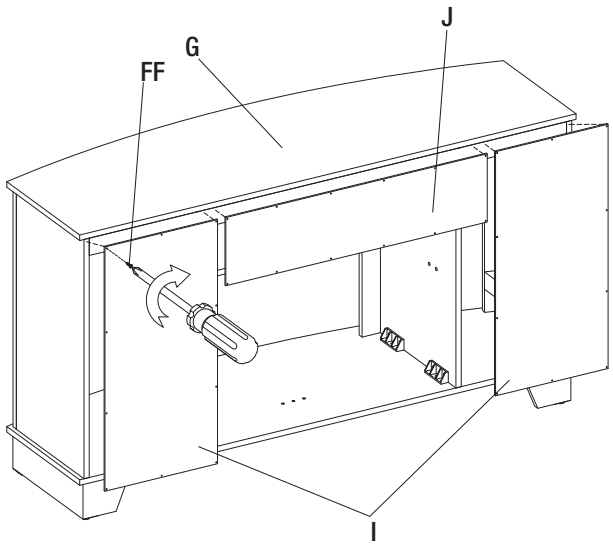

12 Attaching the hinges

- ☐ Attach the Euro Hinge (H-2) to the Right Front Door (M).
- ☐ Use a Phillips head screwdriver to tighten the Flathead Screw (JJ) into the pre-drilled holes.
- ☐ Repeat for the Left Front Door (L).

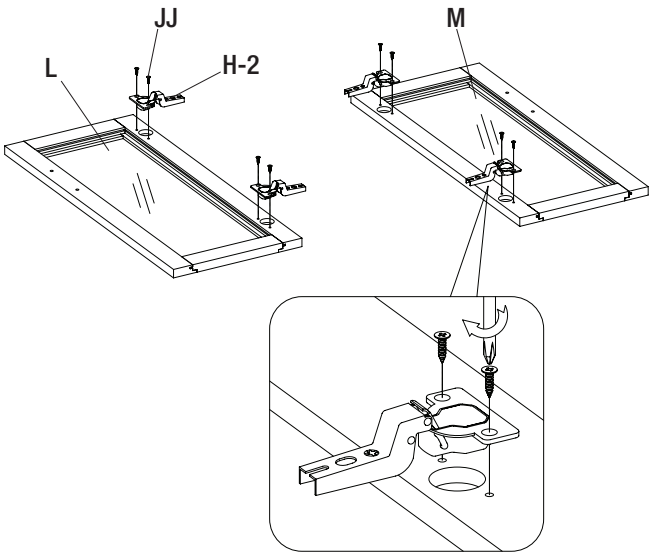

Assembly (continued)

13 Attaching the knobs

- □ Remove the presassembled Screws from the Door Knobs (GG), then attach the Door Knobs (GG) to the Left Door (L) and the Right Door (M) with the Screws.

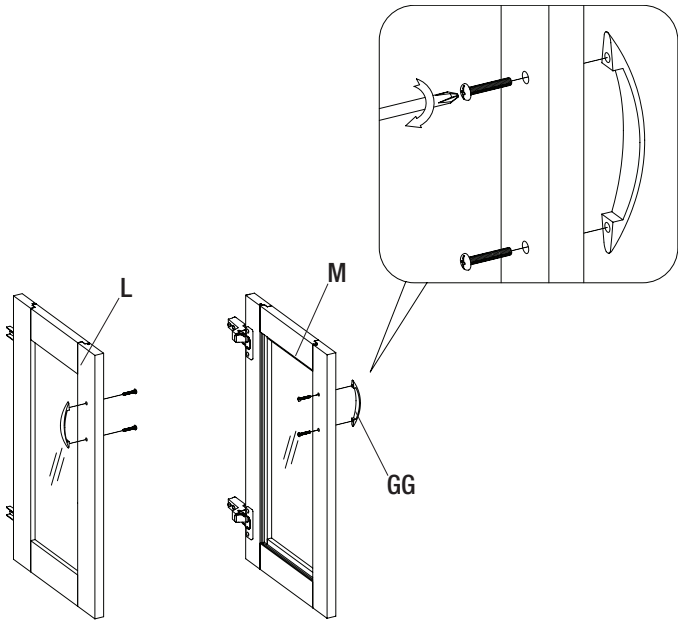

14 Installing the doors

- □ Align the Hinges (H-2) to the Hinge Brackets (H-1), Sliding Hinges (H-2) onto the Hinge Brackets (H-1).
- □ Tighten the preassembled screw on the Hinge Bracket (H-1) to secure each door in place.
- □ Hinges are fully adjustable as shown below.

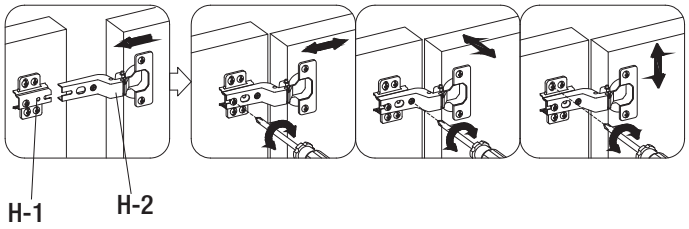

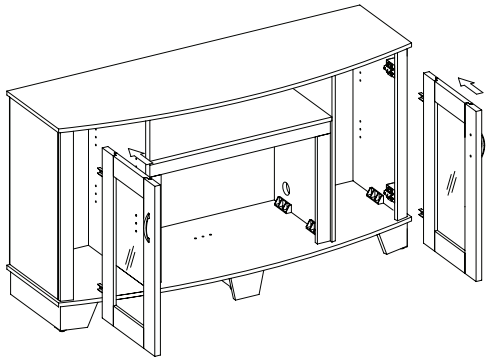

15 Installing the adjustable shelves

- □ Choose desired height of the adjustable Shelf (H) and place the four adjustable Shelf Pins (EE) in the corresponding holes.
- □ Insert the adjustable Shelf (H) on top of the Shelf Pins (EE).
- □ Repeat as desired for the other adjustable Shelves (H).
- □ Adjust pre-attached Levelers (QQ) to desired height for stability.

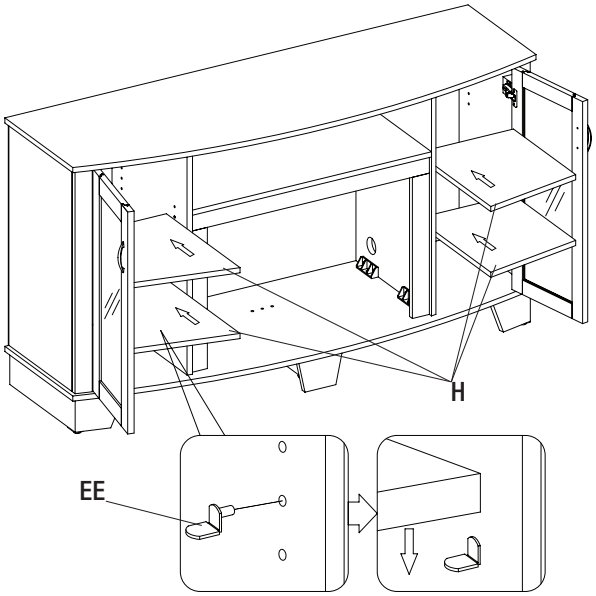

16 Installing the fireplace insert into the mantel assembly

- □ Lift the fireplace insert carefully into the back of the unit and center in the fireplace insert opening.
- □ Do not drag the fireplace insert across the Base (A) as it may scratch your unit.

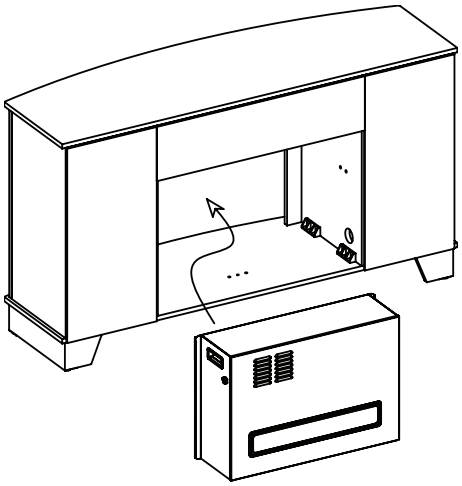

17 Attaching the center securing block

- □ Attach the Securing Block (R) that holds the fireplace insert from the back by inserting Small Bolts (DD) through the 3 Hole Connector (NN) and into the pre-drilled holes of the panel.

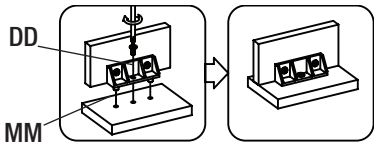

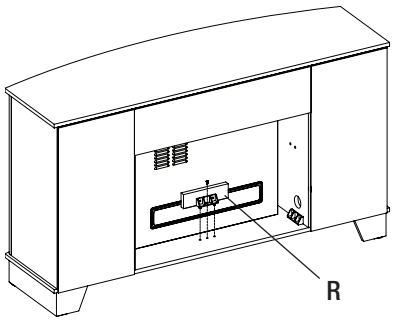

18 Attaching the left and right securing block

- □ Attach the Left and Right Securing Blocks (S and T) to hold the fireplace insert in place by inserting Large Bolts (AA) through Washers (BB) and into the pre-drilled holes inside the mantel assembly.

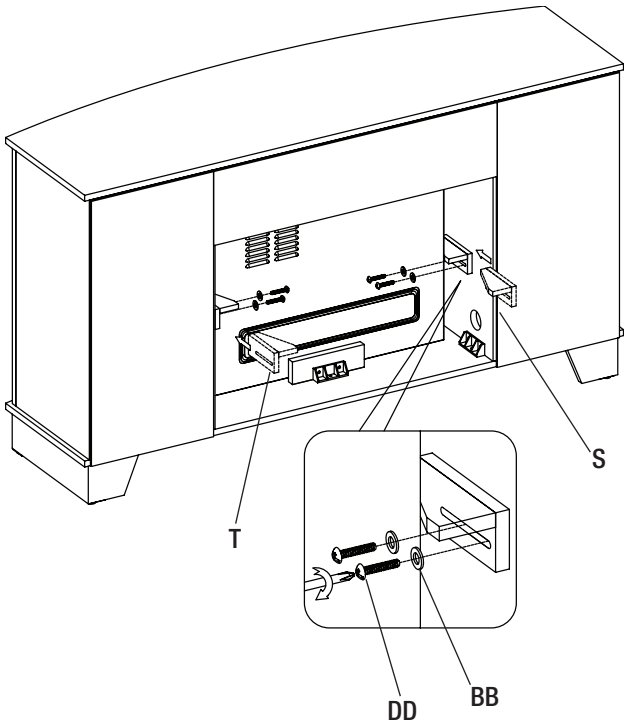

Assembly (continued)

19 Installing the tipping restraint hardware

- □ When the Tipping Restraint Hardware Kit (KK) is properly installed, it can provide protection against unexpected tipping of the Unit due to small tremors, bumps or climbing.
- □ Your Unit comes with two Tipping Restraint Hardware Kits (KK). Each Tipping Restraint Hardware Kit (KK) includes one Unit Anchor, one Wall Anchor, one Anchor Tether, and four Anchor Screws. Use these to complete the following steps for a proper installation.
- □ Locate a secure wall stud behind the unit closest to left side.
- □ Align the Unit Anchor with a wall stud and attach with two Anchor Screws using a Philips Head Screwdriver. The Anchor Screws must pass through the Side Back Panel (I) and into the Support Rail (N) for proper installation.
- □ Align the Wall Anchor in the center of the wall stud, at level with the Unit Anchor, and attach with two Anchor Screws using a Philips Head Screwdriver.
- □ On the Anchor Tether, detach the cable from the connector and loop the loose cable through the eyelets on the Wall Anchor and Unit Anchor. Reattach the loose cable to the connector, but do not tighten.
- □ Locate a secure wall stud behind the unit closest to the right side, and repeat the steps above.
- □ Tighten both Anchor Tethers by pulling the cable the through connector.

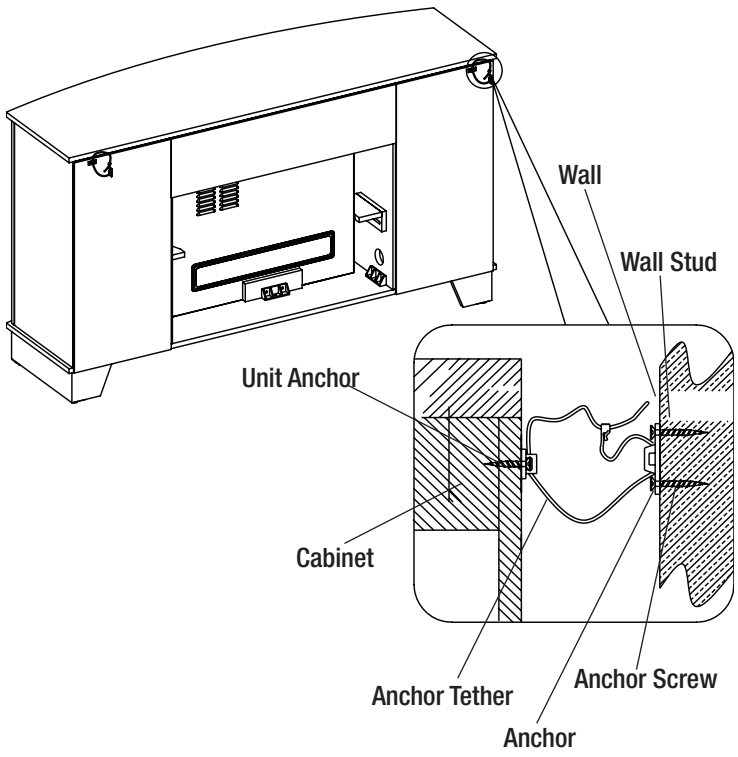

NOTE: Installation of the Tipping Restraint Hardware Kit (KK) will provide a small space between the wall and the unit. This will allow you to run power cords and connector cables to your television or other devices placed on top of the Unit..

WARNING: You must install the Tipping Restraint Hardware to help prevent accidents or damage to the unit.

CAUTION: Cold climate installation recommendation: When installing this unit against a non-insulated exterior wall or chase, it is mandatory that the outer walls be insulated to conform to applicable insulation codes.

CAUTION: A 15-Amp, 120-V, 60 Hz circuit with a properly grounded outlet is required. Preferably, the fireplace will be on a dedicated circuit as other appliances on the same circuit may cause the circuit breaker to trip or the fuse to blow when the heater is in operation. The unit comes standard with 6-ft. three-wire cord, exiting from the rear of the fireplace.

Operation

NOTE: The control panel can be accessed at the upper-right corner of the insert. When a function is changed from the control panel or remote control there will be a corresponding indicator (see Figure 1) on the upper-right of the projection screen. The indicator shows the function changed and the level selected by the control panel or remote control. When the function is turned off, the corresponding indicator will flash several times and then fade off.

Fig . 1

1 Powering the fireplace

- Push the Power button to supply power to all functions of the fireplace and put the insert in a standby mode.
- Push the Power button again to turn off all functions.

NOTE: All previous settings are held in memory, so the next time you power up the fireplace, the unit will turn on with the same settings.

NOTE: Holding the Power button on the control panel for 3 seconds will disable the heater function.

2 Adjusting the flame

- There are 6 brightness levels that can be selected:

  Settings F6 - F4 decrease in Amber brightness

  Settings F3 - F1 decrease in Spectrafire brightness

3 Adjusting the heater

- Press the Heater button to set the thermostat. The fireplace contains three infrared quartz heating elements.
  The thermostat setting range is 62°F - 82°F or 17°C - 27°C or always ON.
  The thermostat is adjustable by 2°F or 1°C increments.
  The up and down buttons"+ —"on the remote will increase / decrase temperature setting.

NOTE: To change between °F and °C press and hold the HEATER button on the control panel for 3 seconds.

4 Setting the timer

Pressing the Timer button will cycle through the timer settings; 30 minutes, 1 Hour, 2H, 3H, 4H, 5H, 6H, 7H, 8H, 9H and off.

Operation (Continued)

5 Replacing the remote control battery

- When the remote control stops operating or its range seems reduced, it is time to replace the battery with new ones.
  - On the back end of the remote, press and slide the battery door open and remove the old battery.
  - Insert 2 AAA batteries (batteries not included), checking that the + and - sides of the battery match inside the battery compartment.
  - Replace the battery compartment door.

NOTE: Do not mix old and new batteries. Do not mix alkaline, standard (carbonzinc), or rechargeable (nicad, nimh, etc) batteries. Do not ingest batteries.

NOTE: Please operate the remote control at a slow measured pace. Press the remote control buttons with an even motion and gentle pressure. Repeatedly pressing buttons in rapid succession may cause the transmitter to malfunction.

NOTE: Batteries should be removed if the product is to be left unused for a long time.

6 Disposing of used batteries

- The battery may contain hazardous substances that could endanger the enviroment and human health.
- This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Instead it shall be left at the appropriate collection point for recycling.
- By correctly disposing used batteries, you prevent potential negative consequences for the environment and human health. Recycling used materials also conserves natural resources.
- For more information about collecting and recycling used batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased this product.

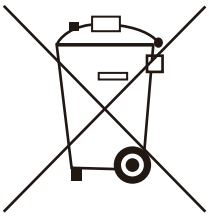

7 Power cord information

- This heater is for use on 120 volts. The cord has a plug as shown in the figure.
- Connect to properly grounded outlets only.
- Do not use a 2 prong adapter. Never use with an extension cord or relocatable power tap (outlet/ power strip).

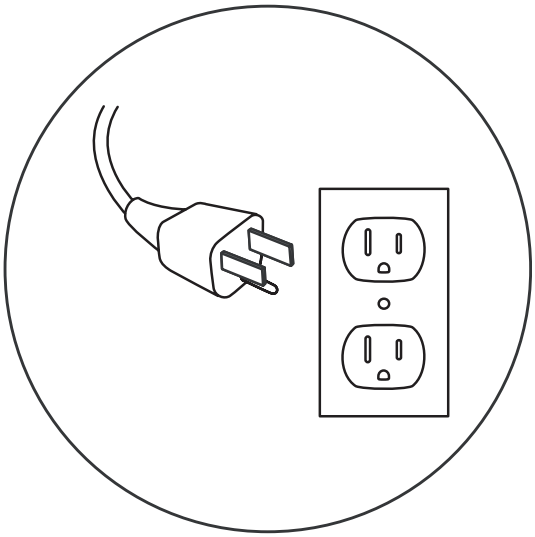

FCC/IC Information

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- □ Reorient or relocate the receiving antenna.
- □ Increase the separation between the equipment and the receiver.
- □ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- □ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.

Care and Cleaning

- □ Dust your fireplace regularly with a soft non-lint-producing cloth or household dusting product.
  Clean your fireplace with a gentle non-abrasive household cleaner. Dry your fireplace immediately with a soft cloth or towel.

- □ Tips for using touch-up pen (ZZ): For scratches, stroke in direction of scratch. For worn areas, stroke in direction of wood grain. Rub excess colorant promptly with a soft cloth.

- □ The motors used on the fan and the flame generator assembly are pre-lubricated for extended bearing life and require no further lubrication. However, we recommend periodic cleaning/vacuuming of the fan/heater.
  Make sure the unit is turned OFF and unplugged whenever you are cleaning the heater or fireplace.

WARNING: Make sure the power is turned off before proceeding with repairs. Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician in accordance with national and local codes. If repairing or replacing any electrical component or wiring, the original wire routing, color coding and securing locations must be followed. During any service of this appliance, the power to the unit must be turned off. First turn the main power switch to the OFF position. Then remove the electrical plug from the wall outlet.

WARNING: Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.

WARNING: Do not use this fireplace if any part of it has been under water. Immediately call a qualified service technician to inspect the fireplace and replace any part of the electrical system.

WARNING: Disconnect power before attempting any maintenance or cleaning to reduce the risk of fire, electrical shock or personal injury.

Troubleshooting

PROBLEM	ROOT CAUSE	CORRECTIVE ACTION
Display shows "E 1"	The thermostat sensor is broken or disconnected.	Unplug the fireplace, remove the back panel of the fireplace and check that the thermostat is plugged into the main circuit board. If this does not solve the problem contact customer service for a replacement thermostat sensor.
Display shows "E2"	The thermostat sensor is broken.	Contact customer service for a replacement thermostat sensor.
Display shows "E3"	Manual Reset overheat protection has triggered.	Inspect the heater and check that the air inlets and outlets are not blocked as this may cause overheating. Unplug the heater for 30 minutes and allow it to cool down. Replug and operate, monitor the heater for signs of overheating, if the problem persist discontinue use of the heater and contact customer service.
Display shows "Er"	This is normal operation.	Check your heater cord and plug connections. Faulty wall outlet connections or loose plugs can cause the outlet or plug to overheat. Be sure the plug fits tight in the outlet. Heaters draw more current than small appliances, overheating of the outlet may occur even if it has not occurred with the use of other appliances. During use check frequently to determine if your plug outlet or faceplate is HOT! If so, discontinue use of the heater and have a qualified electrician check and/or replace the faulty outlet(s).
The heater does not blow warm air.	The heater is in a cool down cycle.	Normal operation will continue to run for several minutes before shutting down. Times will vary based on tempertures. During this time cool air will blow.
There is no power and the logs do not glow.	There is no power to the unit.	Check that the unit is plugged into a standard 120V outlet. Press the Power button several times, make sure power is set to the "ON"position.
Logs glow, but there is no flame effect.	The flame effect is turned off.	Press the flame button several times.
The heater does not blow warm air.	Thermostat setting is preventing the heater from turning on.	Adjust the temperature settings to ensure that the thermostat is set higher than the current room temperature.

Troubleshooting (Cont.)

PROBLEM	ROOT CAUSE	CORRECTIVE ACTION
Flame effect works but heater function does not and the emberbed flashes when the heater button is pressed.	The heater is disabled.	With the power on press and hold the POWER button on the control panel for 10 seconds. Once re-enabled the emberbed lights will flash multiple times.
The remote control is not working.	There are no batteries in the remote control.	Change the remote batteries.
	The signal is poor	Operate remote transmitter at a slow measured pace. Press the remote control buttons with an even motion and gentle pressure. Repeatedly pressing buttons in rapid succession may cause the transmitter to malfunction.
	The remote is located too far from the heater.	Operate the remote at a distance less than 20 ft. from the front of the appliance; point the remote at the control panel.

Replacement Parts

For replacement parts, call our customer service department at 1-800-986-3460, 8 a.m.-7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday.

Part	Description	Qty.
1	Flame Generator Drive Motor	1
2	Thermostat Sensor	1
3	Main Circuit Board	1
4	Thermostat	1
5	Heater/Blower Assembly	1
6	Control Panel Circuit Board	1
7	Control Panel Buttons	1
8	Emberbed with Log	1
9	Emberbed Circuit Board	1
10	Blue Flame Circuit Board	1
11	Flame Circuit Board	1
12	Flame Generator/ Spinner	1
13	Remote Control	1

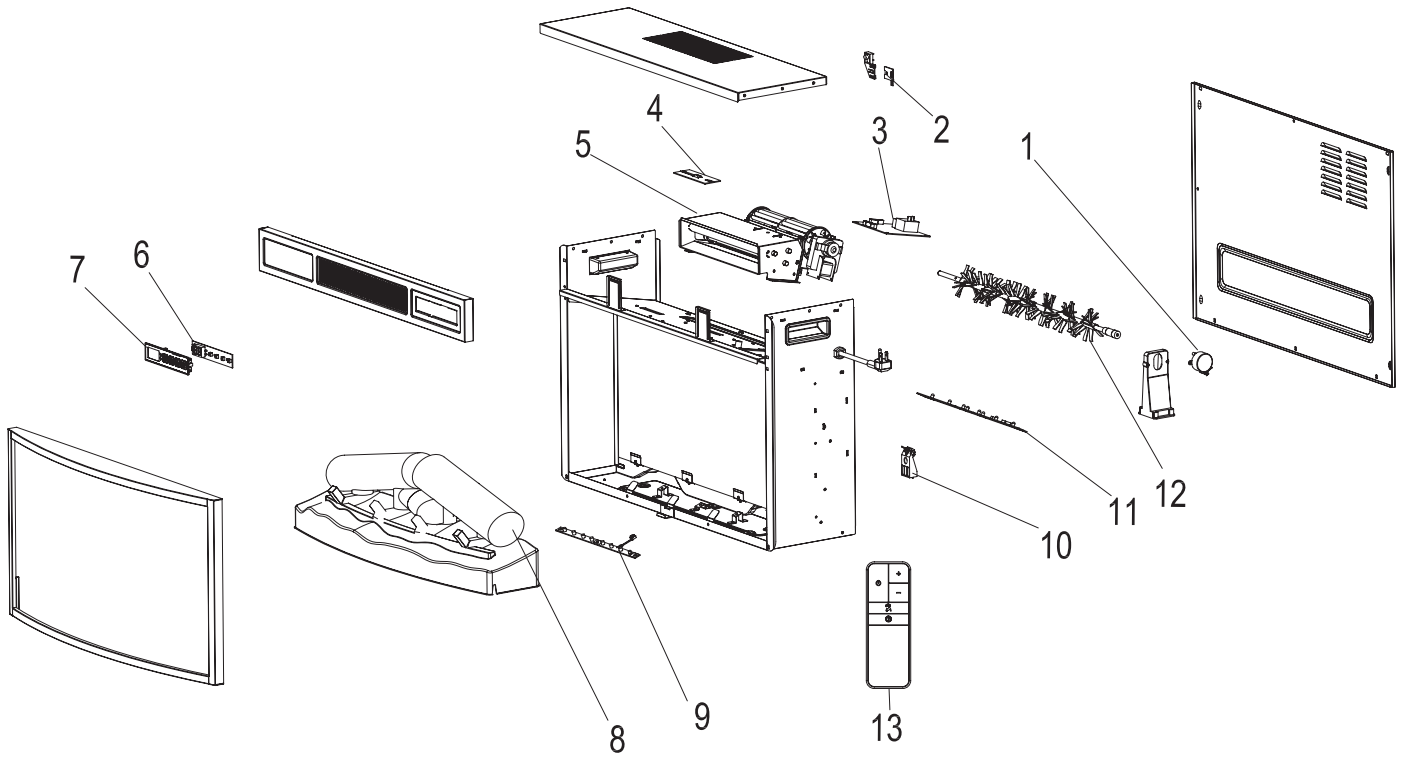

HOME
DECORATORS
COLLECTION

Questions, problems, missing parts? Before returning to the store call
Home Decorators Customer Service

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

RETAIN THIS MANUAL FOR FUTURE USE.